


Baseball/Softball Models BA-1, BA-3, and BA-4 Console Operating Instructions

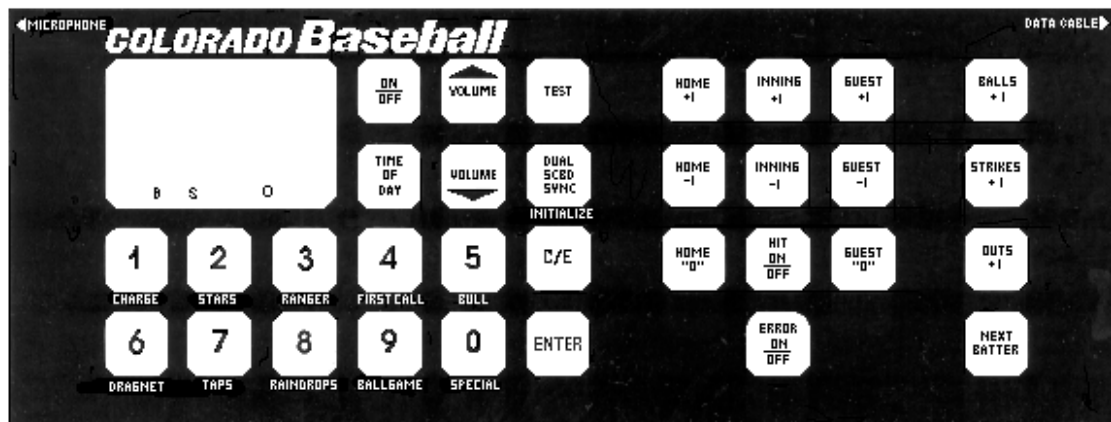

Models BA-1, BA-3, and BA-4 Baseball Keyboard

ON/ OFF

Press to blank scoreboard display.
Press again to turn scoreboard display ON. This key controls only the display. Electrical power remains unaffected by this key.

VOLUME

The two volume keys adjust the PA volume up or down. Each time you press the key, the LCD console display indicates the relative power level of the PA. (Setting "1" is the lowest level, "16" is the highest level.)

Press the ARROW UP key to raise the volume level.
Press the ARROW DOWN key to lower the volume level.

When held down, the level steps up (or down) until the maximum (or minimum) level is attained.

TEST

Press the TEST key to check or test the scoreboard. The scoreboard sequentially displays "8s" until all digits have turned on. Several seconds later, the scoreboard display returns with same data displayed originally. The console LCD displays "88:88" throughout the test.

DUAL SCOREBOARD SYNC

(Dual Scoreboard Synchronization)

This key is used when you are operating two or more scoreboard displays from the same operator's console. After all scoreboard connections have been made and electrical power applied to the scoreboard, press this key once. The scoreboards will now be synchronized.

ENTER

Press after manually entering (via the numeric keys) a Home Score, Guest Score, Time Edit, or Time-of-Day.

C/E

(Clear Entry) Press to clear an entry at the console prior to pressing the ENTER key. If you press ENTER prior to clearing an entry, you will have to perform the original operation over again. The C/E key also terminates a sport tune.

HOME +1 GUEST +1

Press to increase score by one.

HOME -1 GUEST -1

Press to decrease score by one.

HOME 0 GUEST 0

Press to display 0 score at the scoreboard.

INNING +1

Press to increase inning by one.

INNING -1

Press to decrease inning by one.

HIT ON/OFF

Press to turn HIT dot indicator ON. Press again to turn HIT indicator OFF. (Model BA-1 only)

ERROR ON/OFF

Press to turn ERROR dot indicator ON. Press again to turn ERROR indicator OFF. (Model BA-1 only)

BALLS + 1

Press to display BALL indicator. Press again for BALL 2. Press again for BALL 3. Press again to blank all BALL indicators.

STRIKES -1

Press to display STRIKE 1 indicator. Press again for STRIKE 2 indicator. Press again to blank all STRIKE indicators. (*Models BA-1 and BA-3*)

OUTS + 1

Press to display OUT 1 indicator. Press again for OUT 2. Press again to blank all OUT indicators. (*Models BA-1 and BA-3*)

NEXT BATTER

Press to clear BALL and STRIKE indicators and ready the console for the next batter.

TIME OF DAY

To enter Time-of-Day into the operator's console, first press the TIME OF DAY key once. Next, enter the current time-of-day in hours and minutes (HH:MM) using the numeric keys and then press ENTER to store the data.

Note: Each time power is removed from the system, time-of-day will have to be re-entered.

Time-of-day displays in the console LCD when the TIME OF DAY is pressed; press the ENTER key before selecting another function.

SPORT TUNES

The numeric keys are used for manually entering or editing times and/or scores as previously explained.

The numeric keys have a secondary function of sport tunes selection. Press the corresponding numeric key to play a particular sports tune. For example, to play "CHARGE," press the "1"; to play "FIRST CALL," press the "4".

Note: You have the option of enabling or disabling the sport tunes by adjusting selector switch #5 (the selector switch is located on the scoreboard's control board.) Refer to your **SCOREBOARD INSTALLATION MANUAL** (F290) for a more complete explanation.

PA OPERATION

Every COLORADO scoreboard system includes a built-in public address amplifier, a 40-watt weatherproof speaker and a hand-held microphone. The microphone plugs into the jack on the left-hand side of the operator's console. Volume is controlled by the VOLUME UP/VOLUME DOWN keys.

To announce over the PA system, hold the microphone close to your mouth, depress the button on the microphone, and speak clearly into the microphone.

Optional Music Adapter: If you purchase the optional music adapter, Model MA-1 (tape cassette interface cable), plug the 1/4 inch plug into the microphone jack on your tape recorder. Adjust the volume on your tape recorder to prevent distortion over the PA songs such as "The Star Spangled Banner."

If you have additional questions regarding the operation of this or any Colorado Time Systems' equipment, please call our Customer Service Representatives at 1-800-287-0653.



1551 East 11th Street
Loveland, CO 80537
970-667-1000 Fax 970-667-1032
www.coloradotime.com