


Baseball/Softball Model BA-2 Console Operating Instructions

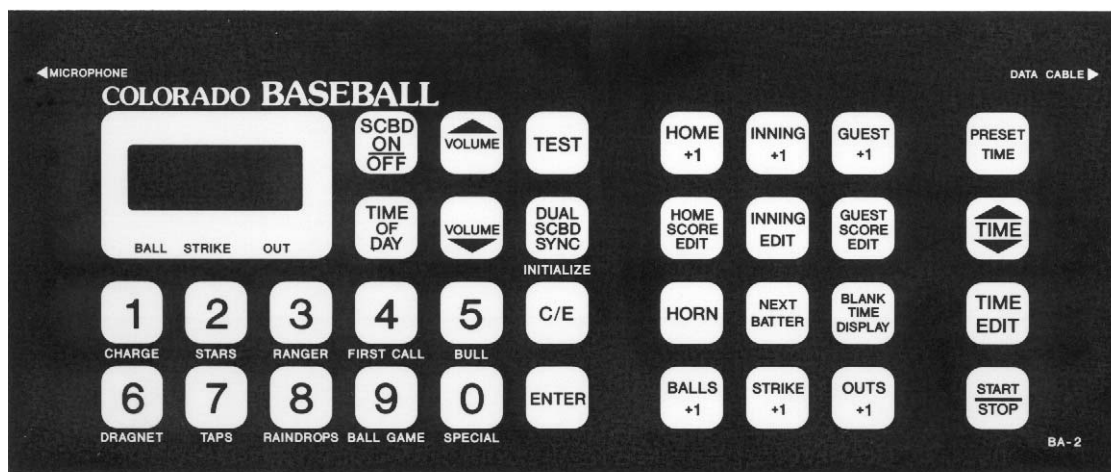

Model BA-2 Baseball Keyboard

PRESET TIME

Apply power to the scoreboard. Refer to your Scoreboard Manual (F290). Initially the scoreboard displays a preprogrammed Preset Time of 60:00.

(Home & Guest score shows 0, Ball is 0, Strike is 0, Out is 0, and the Inning displays 1.)

If you require a Preset Time other than 60:00, follow these steps:

1. Press the Preset Time key once.
2. Using the numeric keys on the console, enter the desired Preset Time. The console LCD display indicates the time you've entered.
3. Press the ENTER key once to display the new Preset Time.

Note: To restore the Preset Time once the clock has counted down to 0, press the TIME COUNT UP/DOWN key twice. The Preset Time will have to be reprogrammed after each time electrical power is removed from the system.

TIME COUNT UP/DOWN

This key is used to set the clock to count time down from the preset time to 0:00; or to count time up from 0:00 to the preset time.

Press the key once. If "DN" (down) appears in the console LCD window when the START key is pressed, the clock starts at the preset time and counts time down to 0:00. The horn does not automatically sound. You must press the HORN key to sound the horn.

Press the key once. If "UP" appears in the console LCD window when the START key is pressed, the clock starts at 0:00 and counts time up to the preset time. Upon reaching the preset time the clock will automatically stop.

TIME EDIT

This key is used to edit the time displayed. With the clock stopped, first select the Count Time Up or Count Down mode. Then press TIME EDIT once. Next, using the numeric keys on the console, enter the time desired. The console LCD display indicates the time entered. Finally, press the ENTER key once. The time immediately changes on the scoreboard to the time entered.

START/STOP

Press this key once to start the clock. Press the key again to stop the clock.

Note: All time editing, score editing, inning editing, and count UP/DOWN functions must be performed with the clock in the "stop" mode.

HORN

Press to sound game horn manually. Volume of the horn is preset at the factory.

Note: The horn will not automatically sound when the clock reaches 0:00. You must press the HORN key to sound the horn.

BLANK TIME DISPLAY

With the clock stopped press once to make the TIME digits display the time of day. The LCD will display "on 2."

Press again to blank the TIME digits. The LCD will display "OFF."

Press again to make the TIME digits display game

time. The LCD will display "on 1."

SCBD ON/ OFF

Press to blank scoreboard display. Press again to turn scoreboard display ON. This key controls only the display. Electrical power remains unaffected by this key.

VOLUME

The two volume keys adjust the PA volume up or down. Each time you press the key, the LCD console display indicates the relative power level of the PA. (Setting "1" is the lowest level, "16" is the highest level.)

Press the ARROW UP key to raise the volume level.
Press the ARROW DOWN key to lower the volume level.

When held down, the level steps up (or down) until the maximum (or minimum) level is attained.

TEST

Press the TEST key to check or test the scoreboard. The scoreboard sequentially displays "8s" until all digits have turned on. Several seconds later, the scoreboard display returns with same data displayed originally. The console LCD displays "88:88" throughout the test.

DUAL SCOREBOARD SYNC

(Dual Scoreboard Synchronization)

This key is used when you are operating two or more scoreboard displays from the same operator's console. After all scoreboard connections have been made and electrical power applied to the scoreboard, press this key once. The scoreboards will now be synchronized.

ENTER

Press after manually entering (via the numeric keys) a Home Score, Guest Score, Time Edit, or Time-of-Day.

C/E

(Clear Entry) Press to clear an entry at the console prior to pressing the ENTER key. If you press ENTER prior to clearing an entry, you will have to perform the original operation over again. The C/E key also terminates a sport tune.

HOME +1 GUEST +1

Press to increase score by one.

HOME -1 GUEST -1

Press to decrease score by one.

HOME 0 GUEST 0

Press to display 0 score at the scoreboard.

INNING +1

Press to increase inning by one.

INNING EDIT

This key is used to edit the INNING display. Press INNING EDIT once. Using the numeric keys on the con-

sole, enter the correct INNING number. The LCD display indicates the number you have entered. Press ENTER. The number you entered is displayed immediately on the scoreboard.

BALLS +1

Press once to sequence. The sequence is 0, 1, 2, 3, blank, repeat.

STRIKE +1

Press once to sequence. The sequence is 0, 1, 2, blank, repeat.

OUTS +1

Press once to sequence. The sequence is 0, 1, 2, blank, repeat.

NEXT BATTER

Press to clear the BALL and STRIKE count and ready the console for the next batter.

TIME OF DAY

To enter Time-of-Day into the operator's console, first press the TIME OF DAY key once. Next, enter the current time-of-day in hours and minutes (HH:MM) using the numeric keys and then press ENTER to store the data.

Note: Each time power is removed from the system, time-of-day will have to be re-entered.

Time-of-day displays in the console LCD when the TIME OF DAY is pressed; press the ENTER key before selecting another function.

SPORT TUNES

The numeric keys are used for manually entering or editing times and/or scores as previously explained.

The numeric keys have a secondary function of sport tunes selection. Press the corresponding numeric key to play a particular sports tune. For example, to play "CHARGE," press the "1"; to play "FIRST CALL," press the "4".

Note: You have the option of enabling or disabling the sport tunes by adjusting selector switch #5 (the selector switch is located on the scoreboard's control board.) Refer to your **SCOREBOARD INSTALLATION MANUAL** (F290, page 3-2) for a more complete explanation.

PA OPERATION

Every COLORADO scoreboard system includes a built-in public address amplifier, a 40-watt weather-proof speaker and a hand-held microphone. The microphone plugs into the jack on the left-hand side of the operator's console. Volume is controlled by the VOLUME UP/VOLUME DOWN keys.

To announce over the PA system, hold the microphone close to your mouth, depress the button on the microphone, and speak clearly into the microphone.

Optional Music Adapter: If you purchase the optional music adapter, Model MA-1 (tape cassette interface cable), plug the 1/4 inch plug into the microphone jack on your tape recorder. Adjust the volume on your tape recorder to prevent distortion over the PA songs such as "The Star Spangled Banner."

If you have additional questions regarding the operation of this or any Colorado Time Systems' equipment, please call our Customer Service Representatives at 1-800-287-0653.



1551 East 11th Street
Loveland, CO 80537
970-667-1000 Fax 970-667-1032
www.coloradotime.com