

4009 and LED Scoreboard Configuration

F867 Rev 1003



Colorado Time Systems

**Corporate Office
1551 East 11th Street
Loveland, CO 80537 USA**

Sales : 800-279-0111 or +1 970-667-1000

**Service: 800-287-0653 x256 or +1 970-667-1000 x256
Service Fax: 970-667-1032**

**Web: www.coloradotime.com
Shop online: <http://secure.coloradotime.com>
Email: customerservice@coloradotime.com**

To configure your swimming scoreboards (4009SB and LED scoreboards), follow these steps.

- 1. Determine what you would like a given scoreboard line to display. See page 2 for sample displays and the channel (or code) numbers to produce those displays.**
- 2. See page 3 to determine the location of the module code switch to set the channel (or code) number.**
- 3. See page 4 for code switch settings.**

Please refer to your scoreboard manual for more extensive information about your scoreboard.

0066 - 4100 CIRCUIT BOARD MODULE CODE SWITCH SETTINGS

Code	Switch	Setting	Code	Switch	Setting	Code	Switch	Setting
00	1	*See below	09	1	*See below	12	1	*See below
	2	Closed		2	Closed		2	Closed
	3	Closed		3	Closed		3	Open
	4	Closed		4	Open		4	Closed
	5	Closed		5	Closed		5	Closed
	6	Closed		6	Closed		6	Open
	7	Closed		7	Open		7	Closed
01	1	*See below	0A	1	*See below	13	1	*See below
	2	Closed		2	Closed		2	Closed
	3	Closed		3	Closed		3	Open
	4	Closed		4	Open		4	Closed
	5	Closed		5	Closed		5	Closed
	6	Closed		6	Open		6	Open
	7	Open		7	Closed		7	Open
02	1	*See below	0B	1	*See below	14	1	*See below
	2	Closed		2	Closed		2	Closed
	3	Closed		3	Closed		3	Open
	4	Closed		4	Open		4	Closed
	5	Closed		5	Closed		5	Open
	6	Open		6	Open		6	Closed
	7	Closed		7	Open		7	Closed
03	1	*See below	0C	1	*See below	15	1	*See below
	2	Closed		2	Closed		2	Closed
	3	Closed		3	Closed		3	Open
	4	Closed		4	Open		4	Closed
	5	Closed		5	Open		5	Open
	6	Open		6	Closed		6	Closed
	7	Open		7	Closed		7	Open
04	1	*See below	0D	1	*See below	16	1	*See below
	2	Closed		2	Closed		2	Closed
	3	Closed		3	Closed		3	Open
	4	Closed		4	Open		4	Closed
	5	Open		5	Open		5	Open
	6	Closed		6	Closed		6	Open
	7	Closed		7	Open		7	Closed
05	1	*See below	0E	1	*See below	17	1	*See below
	2	Closed		2	Closed		2	Closed
	3	Closed		3	Closed		3	Open
	4	Closed		4	Open		4	Closed
	5	Open		5	Open		5	Open
	6	Closed		6	Open		6	Open
	7	Open		7	Closed		7	Open
06	1	*See below	0F	1	*See below	18	1	*See below
	2	Closed		2	Closed		2	Closed
	3	Closed		3	Closed		3	Open
	4	Closed		4	Open		4	Open
	5	Open		5	Open		5	Closed
	6	Open		6	Open		6	Closed
	7	Closed		7	Open		7	Closed
07	1	*See below	10	1	*See below	19	1	*See below
	2	Closed		2	Closed		2	Closed
	3	Closed		3	Open		3	Open
	4	Closed		4	Closed		4	Open
	5	Open		5	Closed		5	Closed
	6	Open		6	Closed		6	Closed
	7	Open		7	Closed		7	Open
08	1	*See below	11	1	*See below	<p>*Switch 1 Data Communication Speed</p> <p>High Speed Open</p> <p>Low Speed Closed</p> <p>Note: Switch 1 speed setting must match your timer's data communication speed. Refer to your timer user guide for more information</p> <p>Switch 8, if present, is not used.</p>		
	2	Closed		2	Closed			
	3	Closed		3	Open			
	4	Open		4	Closed			
	5	Closed		5	Closed			
	6	Closed		6	Closed			
	7	Closed		7	Open			