LED Numeric Scoreboard Configuration (LED-R)

Colorado
TIME SYSTEMS
A PLAYCORE Company

Colorado Time Systems

Corporate Office
1551 East 11th Street
Loveland, CO 80537 USA

Sales :+1 800-279-0111 or +1 970-667-1000
Service: +1 800-287-0653 or +1 970-667-1000
Service Fax: +1 970-667-1032

Web: www.coloradotime.com
Shop online: http://secure.coloradotime.com
Email: support@coloradotime.com

To configure your LED numeric scoreboards follow these steps.

1. Determine what you would like a given scoreboard line to display. See page 2 for sample displays and the channel (or code) numbers to produce those displays.

2. See page 3 to determine the location of the module code switch to set the channel (or code) number.

3. See page 4 for code switch settings.

Please refer to your scoreboard manual for more extensive information about your scoreboard.

LN	PL	TIME	Channel Number
1	8	88:88.88	01/11*
2	8	88:88.88	02
3	8	88:88.88	03
4	8	88:88.88	04
5	8	88:88.88	05
6	8	88:88.88	06
7	8	88:88.88	07
8	8	88:88.88	08
9	8	88:88.88	09
A	8	88:88.88	0A
b	8	88:88.88	17
C	8	88:88.88	18

LENGTHS	RECORD
88	88:88.88	0B

Channel Number (right column):

EVENT		HEAT	Channel
888		888	0C

HOME	GUEST	GUEST	Channel
888	88	888	0D/11*

1	2	3	4	5	6	7	8	Channel
8	8	8	8	8	8	8	8	0E

| 8 | 8 | 88:88.88 | 12** |

HOME	G1	G2	G3	Channel
88	88	88	88	13

HOME	GUEST 1	Channel
8888	8888	14

GUEST 2	GUEST 3	Channel
8888	8888	15

| 88:88 | 16 |

The figure above shows sample scoreboard module displays and the corresponding channel selections to produce them. Set the switches inside each scoreboard module to agree with the channel number listed beside it as shown in the figure above.

The sports timer Swimming software uses the channels to transmit specific race information. For example, channel 01 sends the place and time information for Lane 1, channel 0C sends the event and heat information for the current race. To function properly, the switches in each scoreboard module must be set to receive the proper information. Refer to your timer manual for more details.
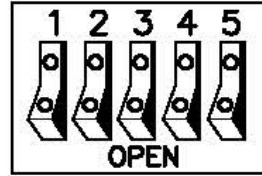
A few special settings:

Channel 03 also displays the time of day when you press the **Scoreboard Blank** softkey on the Scoreboard softkey menu.

*Channel 11 is a multi-purpose channel that displays time and place information for lane 1 (channel 01) during the race. Following **reset**, team scores (channel 0D) are automatically displayed on the same scoreboard module.

**Channel 12 is a special purpose channel which is very useful for televised broadcasts. It displays the running time, lead split time and winning finish time. Unlike channel 0F, this channel does not cycle through all finish times, but displays only winning time until it is reset.

CIRCUIT BOARD MODULE CODE SWITCH SETTINGS

Control board located under digits to the right of center.

00 08 10 18

01 09 11 19

02 0A 12 1A

03 0B 13 1B

04 0C 14 1C

05 0D 15 1D

06 0E 16 1E

07 0F 17 1F

Customer Service Department
www.coloradotime.com
Email: support@coloradotime.com
Phone: +1 970-667-1000
Toll Free U.S. and Canada 800-287-0653
Fax: +1 970-667-1032